



SAKURA

櫻花殺菌消毒碗櫃

Sakura dish dryer and sterilizer

承蒙您購買櫻花產品，非常感謝。

- 使用前請閱讀本安裝、使用說明書，並正確地使用。
- 保證卡從商店取回之際，請務必確認是否寫下必要之事項。
- 因製品改良，可能會使機器本體規格與說明書之內容不同，請事先瞭解之。
- 請妥善保存本使用說明書，遇到不瞭解及發生異常時有幫助。


F74-0485-001

目 錄







1. 部品名稱	1
2. 安裝前的準備與確認	2
3. 安裝方法	4
4. 紙巾架的安裝/碗盤架的安裝/啓動確認	5
5. 使用方法	6
6. 使用注意事項/清潔保養	7
7. 異常處理	8
8. 性能規格表	9

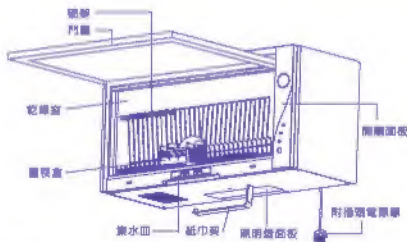部 品 名 稱

型號: Q-7562S / Q-7560W



■附屬零件：

名 稱	數 量	名 稱	數 量
華 司 	8 個	吊繩固定板 	2 塊
安裝施工圖 	1 張	滑軌固定板 	2 片
紙巾架 	1 件	附 件 包	1 包
L型吊繩 	2 塊		

*選購之配件包，為擺放桌上安裝使用，包含4個腳座及4支螺絲及1片上蓋板(僅Q-7560W適用)。

安裝前的準備與確認

1. 安裝位置：

- (1)殺菌消毒碗櫃應儘可能安裝在幹盆上方。(如圖A)
- (2)安裝時務必遠離氣體爐具(如氣體爐、熱水爐等)及電器(如電暖爐、電烤箱等)15公分以上(如圖B)。



圖A


2. 安裝位置的強度與平面度：

安裝前請先確認安裝位置（吊櫃、牆壁）的強度與平面度。若安裝位置不牢固會有崩塌的危險。此外平面度若不齊也會造成歪斜，同時門會產生縫隙、高低不同等情形。(如圖C)



圖B

機體淨重	19kg 以下	21kg 以下
安裝位置強度標準	40kg 以上	50kg 以上

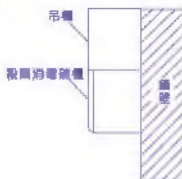

圖C

3. 配線工程：

(1)電力配線：

- 請領有合格執照之水電技術人員施工。
- 將電源插座安裝靠近機器1.2公尺以內之位置。
- 電源開關時將會有5安培的電流通過，所以在配線時須注意其電線線徑大小。

安裝前的準備與確認

(2) 接地配線工程：


為防止漏電之意外事故，按照現場狀況，請選擇以下所列其中一種方式作適當的接地。

- 當電源插座附有接地端子時。
- 使用接地棒。(如圖D)
- 機器安裝在有水氣和漏氣多的地方，以機器本體為基準，依照規定

施工方式進行接地工程。另外請在有水氣的地方安裝漏電斷路器。

(3) 接地工程須注意以下事項：

- 不可將接地線連接於燃氣管、電話線及避雷針的接地回路上；或者連接於漏電斷路器及其他電器的接地迴路。
- 使用附有接地端子之插座時，請確認接地電阻抗值在 10Ω 以下。

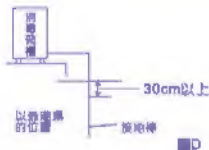

安裝方法

1. 壁掛式安裝方法：


- (1) 在牆壁上適當位置，依安裝施工圖指示，圓孔留下記號，並鑽 4 個 $\phi 1/4$ 孔 (如圖 E)。
- (2) 取塑膠栓及自攻螺絲，將吊鐵固定板鎖固於牆上。
- (3) 將機器掛入固定板，再將扁圓頭螺絲鎖入固定板上即可 (如圖 F)。



2. 頂掛式安裝方法：

* 按裝前請先確認櫥櫃材質若不是實心，請勿按裝其上。

- (1) 將安裝施工圖由下往上貼於櫥櫃下，對準櫥櫃之前緣，依圖上指示之圓孔做下記號並鑽 6 個圓孔 (如圖 G)。
- (2) 取 4 支 M5 之螺絲套入華司後，鎖入左右滑軌固定板內，請勿鎖緊，約鎖入 5-6mm 即可 (如圖 H)。
- (3) 將烘碗機對準滑軌固定板，並往內推壓兩側櫃體實接，再將螺絲鎖緊。
- (4) 最後，再取 2 支 M5 之螺絲套入華司後，由櫥櫃上方鎖入滑軌固定板內即完成 (如圖 I)。



3. 擺放桌上安裝方式：(僅 Q-7560 W) 請用附件包內之腳墊，鎖固於烘碗機底部，鎖緊即可，並將上蓋板放置於烘碗機上方鎖緊即可。(如圖 J)



紙巾架的安裝/碗盤架的安裝/啓動確認

紙巾架的安裝

1. 請將紙巾架依所示位置安裝好，並以螺絲鎖緊於消毒碗櫃上。

碗盤架的安裝

1. 將筷子盒、碗架等附件依規定安裝。

啓動確認

1. 請將插頭插入 220V 插座，確認時間計時是否顯示，烘乾操作是否正常。

使用方法

1. 開關門的方法：

此殺菌消毒碗櫃門蓋上掀式，開啓時先將手放於門把手處，向上掀開至完全水平後再向內推入。關閉時請先拉出至完全水平後再向下慢慢關閉。(如圖J)

※注意：在關閉時請在門完全拉出後再向下關上，否則極易造成故障。(如圖K)



2. 收置餐具的方法：

餐具清洗完畢之後，請徹底將水分瀝乾，並且直接放入碗櫃內妥善安置。



3. 按鍵功能操作說明：

● Q-7562S / Q-7560W

(1) 開/關鍵：

控制機器殺菌/烘乾之開與關，當按下開/關鍵啓動電源，按鍵顯示紅色且烘乾，時間設定預設在第一段60分鐘。

(2) 「照明燈」：

控制燈亮與熄。

(3) O3臭氣指示燈：

臭氣啓動時，藍色指示燈會閃爍。

(4) 旋轉時間鍵：

可選擇烘乾時間，操作順序為60分鐘(按鍵顯示紅色)→45分鐘(按鍵顯示綠色)→30分鐘(按鍵顯示藍色)，循環操作。

4. 烘乾(臭氣)及殺菌時間設定方法：

● Q-7562S / Q-7560W

(1) 烘乾時間有三段—60分鐘/45分鐘/30分鐘可供選擇，因餐具數量、放置方式及氣壓等不同而有所不同。

(2) 當按下開/關鍵，烘乾時間設定後，機器開始作動，同時，時間指示燈會亮，臭氣指示燈亦會閃爍。

(3) 三段烘乾時間中前10分鐘為臭氣殺菌操作時間，10分鐘後臭氣操作完畢，該指示燈不再閃爍；機器自動啓動電熱烘乾系統，待設定時間到達，電熱烘乾殺菌完畢，機器會自動斷電，溫度降至室溫。

使用注意事項/清潔保養

使用注意事項

- 1.請勿在殺菌消毒碗櫃下方使用加熱器具(如氣體爐、電爐等)，而機體內熱風出口亦不得堵塞或者沾到水，否則極易造成機器故障或烘乾不良等情形。
- 2.當機器進行殺菌或烘乾時，請勿將門打開，若有必要，請關機靜待10分鐘後再打開門。
- 3.耐熱度欠佳之塑膠類餐具以及厚度不均的玻璃杯不要放入烘乾(極易導致餐具發生變形、變質)。
- 4.放置餐具時，餐具之間最好排列整齊，由小至大的方向排列，才容易烘乾。
- 5.請徹底的清除餐具上的菜渣及油污，若餐具沒有清除乾淨，仍留有油污就放入消毒碗櫃內，會使得機內有異味產生，無論任何餐具一定要清洗乾淨，才可放入機內。
- 6.請勿把超過14公斤以上之重物放入消毒碗櫃中，以免造成櫃體坍塌的危險。
- 7.本消毒碗櫃除用來烘乾餐具之外，並不設計用來作為其他烘乾之用途。
- 8.長期不使用消毒碗櫃時，請拔去電源線。
- 9.積存於集水器的水在達到滿水線之前就要倒掉。
- 10.使用過程中微量之臭氧洩漏是正常的，請遠離避免過量吸入。



清潔保養

- 1.禁止使用含有甲苯、酒精、強鹼鹼等成份之清潔劑，否則極易傷及機體表面烤漆，而影響整體之美觀性。正確之清洗方式為使用中性的清潔劑來清洗。
- 2.本機門板為塑膠材料，當沾有油污時應使用中性清潔劑來清洗擦乾。

異常處理

1.使用中發現異常狀況時，請關閉電源並聯絡代理商。

2.處理異常狀況時，請將電源關閉。

狀 況	可 能 原 因	處 理 方 式
無電源	停電、插頭沒插	檢查電源插頭
	機器故障(保險絲燒毀)	聯絡代理商
	電源線損壞	電源線損壞時，必須由合格的人員更換，以避免危險
無法烘乾 /殺菌	餐具太多、太濕	烘乾時間加長或重覆烘乾
	電熱器故障(沒有熱風)	聯絡代理商
	臭氣產生器故障	
	紫外線燈管故障	
	啓動器故障	
時間無法 設 定	按鍵開關故障	聯絡代理商
	微電腦故障	聯絡代理商
	電路異常	關掉電源立即聯絡代理商
有異味	殺菌消毒碗櫃內部不潔	使用抹布擦拭，清潔內部
內部積水 滴水	集水器內水已滿	將水倒掉
	排水口堵塞	清潔排水口
噪音大	集水器內水已滿	將水倒掉
	風扇磨打不良	聯絡代理商

性能規格表

* 注意 以下列之殺菌消毒碗櫃規格不得以任何形式修改，若違反此項規定而造成損害，本公司將不負任何責任。

機型		Q-7562S	Q-7560W
外型尺寸		800×332×400mm	500×332×400
淨 重		17kg	10kg
內壁材料		不銹鋼	
網架材料		不銹鋼	
殺菌方式	熱風	○	
	臭氧	○	
	紫外線	X	
	光來殺	○	X
烘乾時間		80/45/30 分鐘 階段定	
時間顯示		X	
超溫切斷		80℃	
照明		9W PL燈	
電壓		220V	
最大額定功率		270W (瓦)	

Content

1. Parts identification	10
2. Preparation and confirmation before installation.	11
3. Installation method	13
4. Installation of the paper towel rack / Installation of the utensil rack / Operation checking	14
5. Operation instruction	15
6. Safety caution.	17
7. Cleaning and maintenance	18
8. Trouble Shooting.	19
III. Specification.	20

Thanks you for purchasing Sakura products.

Please read the installation and instruction manual carefully before operation.


Please fill in all necessary information on the warranty card and send it back to us.

Please understand that the specification of the actual product may be different

from the description in the user manual due to continuous product improvement.

Please keep this user manual properly. It will help while there is an exception problem.

Parts Identification

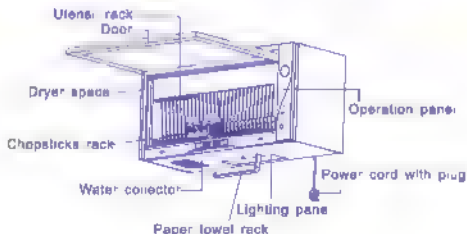

■ Accessories

Descriptions	Quantity	Descriptions	Quantity
Washer	6pcs	Hanger holder 	2pcs
Installation guide	1pcs	Slide holder 	2pcs
Paper towel rack 	1pcs	Accessories pack	1 pack
L-shape hanger 	2pcs		

*Optional accessories are for free standing installation including 4 feet and 4 screws and one piece of upper cover plate. (Q-7560W only)

Preparation and confirmation before installation

1 Installation position

- (1) The sterilizer should be installed above the basin (refer to diagram A);
- (2) The sterilizer should be installed away from gas cookers, gas water heaters or electrical appliances with minimum 15cm distance (refer to diagram B)



Basin diagram

Diagram A

2 Strength and flatness of the installation position

Confirm the strength and flatness of the installation position before installing the sterilizer (upper kitchen cabinet wall). The sterilizer may collapse if the installation position is not strong enough. Also, the sterilizer may be slanted or there may be gaps between the doors if the installation position is not flat enough (refer to diagram C)



Diagram B

Gas cookers

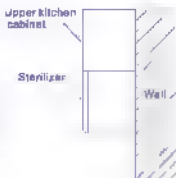


Diagram C

Sterilizer Net Weight	Below 19kg	Below 21kg
Standard strength of the installation position	Above 40kg	Above 60kg

3. Wire installation.

(1) Electric wiring:

- The electric wiring installation should be carried out by qualified technicians.
- The electricity extension socket should be installed within 1.2 meter of the sterilizer.
- There will be 5 AMP electric current passing the wires when the sterilizer is powered on. Please pay attention to the diameter of the wires.


Preparation and confirmation before installation

Installation Method

(2) Earthing connection.

In order to prevent electricity leakage, please use the following method for appropriate earthing connection:

- When the electricity socket has earthing terminal, please connect to the socket for earthing connection.
- Use earthing wire (refer to diagram D)
- When the sterilizer is installed in a place with high humidity, follow the specified installation method for earthing connection. Also, please install a circuit breaker at the place with high humidity to prevent electricity leakage.

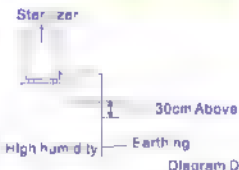

(3) Please beware of the followings while carrying out the earthing connection

- The earthing wire should not be connected to the earthing circuit of the gas pipe, telephone line or lightning rod. Also, it should not be connected to the circuit breaker and earthing circuit of other electric appliances.
- While using the socket with earthing terminal, please make sure the impedance of the earthing connection is below 100.

1. Wall-mounted installation method:

- (1) Mark on appropriate position on the wall according to the installation guide. Drill 4 holes with diameter of 1/4 inches (refer to diagram E)
- (2) Use the plastic plugs and screws to fix the hanger holder on the wall.
- (3) Put the sterilizer onto the hanger holder. Fix it with round head screws. (Refer to diagram F)



Installation Method

2. Installation method for mounting under the kitchen cabinet

*Check if the kitchen cabinet material is solid or not. If it is not solid please do not install the sterilizer on it.

(1) Place the installation guide onto the bottom of the kitchen cabinet aligning with the front edge. Mark and drill 8 holes according to the installation guide (Refer to diagram G)

Place the installation guide

(2) Place washer onto 4 pieces of M5 screws, put the screws into the left and right slide holders. Do not completely fasten them. Fasten them into the kitchen cabinet by 5-6mm. (Refer to diagram H)



Diagram G

(3) Insert the sterilizer to the slide holders and push it against the wall. Completely fasten the screws while the sterilizer is aligned with the front edge of the kitchen cabinet.



Diagram H

(4) Finally place washer onto 2 pieces of M5 screws and fasten them into the slide holder from the top of the kitchen cabinet. (Refer to diagram I).



Diagram I

3. Free standing installation method (For Q-7560W only)

*The optional accessories for this free standing installation including 4 feet and one piece of upper cover plate.

Take out 4 feet from the accessories bag and fasten them into the bottom of the sterilizer and put the upper cover plate on the top of sterilizer and fasten it.



Diagram J

Installation of the paper towel rack

Installation of the utensil rack

Operation checking

Installation of the paper towel rack

Please install the paper towel rack according to the specified location and fix it on the sterilizer by screws.

Installation of the utensil rack

Install the chopstick rack and utensil rack according to specified location.

Operation checking

Put the plug into the 220V socket, check if there is any display on the timer and if the operation is normal.

Operation instruction

1 Opening / Closing the door

To open the door, lift up the door using the bottom door handle, until it is completely horizontal to the sterilizer, then push the door inside the sterilizer.

To close the door, pull out the door until it is completely horizontal to the sterilizer, then slowly put down the door. (Refer to diagram J)

* Caution: Pull out the door completely before closing it, or it will easily cause damages. (Refer to diagram K)



Diagram J




Diagram K

2 Storing the utensils

Completely dry the utensils after cleaning them. Then, put the utensils in the sterilizer in order.

3 Operation instructions

● Q-7562S / Q-7560W

(1) ON / OFF button

For controlling the power on / off of the sterilizer. While pressing the ON / OFF button to operate the sterilizer, the button will be shown red and warming function will be started. The default duration is set at 80 minutes.

(2) Lighting button

For controlling the on / off of the sterilizer lamp.

(3) O3 ozone light indicator

While ozone sterilizing is operated, the light indicator will blink in blue.

(4) Operating duration button

It could be used to select the warming duration. The circulating order for the duration will be 80 minutes (Red shown on the button) → 45 minutes (Green shown on the button) → 30 minutes (Blue shown on the button), in a circulation ordering method.

Operation instruction

4 Setting the warming (Ozone) and sterilizing duration:

● Q-756ZS / Q-7660W

- (1) There are three warming duration for selection (60 minutes / 45 minutes / 30 minutes). The duration will be different depending on the number of utensils, storing order and temperature.
- (2) After pressing the ON/OFF button and setting the warming duration, the sterilizer will start to operate. The duration light indicator will be turned on and the ozone light indicator will be blinked.
- (3) In the 3 warming duration periods, the first 10-minute is the ozone sterilization. After that, the ozone sterilization will stop and the light indicator will not blink. The sterilizer will automatically start the electrical warming system. While the preset time is reached, the electrical warming and sterilizing will stop and the sterilizer will turn off automatically. The operation duration indicator will turn off as well.

Safety Caution

Safety Caution

- 1 Do not use any heating equipment (e.g. Gas cooker, electric oven) underneath the sterilizer. The ventilation outlet should not be stuck or in contact with water, or the sterilizer will easily be damaged.
- 2 Do not open the door while the sterilizer is operating. If necessary, turn off the sterilizer and wait for 10 minutes before opening the door.
- 3 Plastic utensils with low heat-resistance or glasses with uneven thickness should not be put in the sterilizer, or they will easily be deformed.
- 4 The utensils should be stored in the sterilizer in ascending order for easy warming.
- 5 Please clean the utensils completely before storing them in the sterilizer or peculiar smell will be generated.
- 6 Do not store objects with weight over 14 kg in the sterilizer to avoid collapse.
- 7 The sterilizer should not be used for any other purposes apart from sterilizing the utensils.
- 8 If the sterilizer will be left idle for a long period, please unplug the power cord from the socket.
- 9 The water stored in the water collector should be clear before reaching the "Full" line.
- 10 It is normal for a little ozone leakage during operation. Please stay away from the sterilizer to avoid excessive intake.



Cleaning and maintenance

1. Do not use alcoholic, alkaline or corrosive detergent to clean the sterilizer, or it will damage the sterilizer surface. Use neutral detergent to clean the surface of the sterilizer.
2. The door of the sterilizer is made of acrylic material. Use neutral detergent to clean the door if it is greasy.

Trouble Shooting

1. If there are any exceptional problems while operating the sterilizer, please turn it off and contact your dealer for assistance.
2. Please turn off the sterilizer while fixing the problems.

Problems	Possible reasons	Remedies
No power supply	Interruption of power supply or the socket is unplugged	Check the power supply and the socket
	The sterilizer is malfunction (Fuse burnt)	Contact your dealer for assistance
	Power cord is damaged	The power cord should be replaced by qualified technicians to avoid danger
Cannot operate the warming / sterilizing function	Too many utensils or the utensils are too wet	Prolong the warming / sterilizing duration or repeat the warming operation
	The electrical radiator is malfunction (No warm air)	Contact your dealer for assistance
	The ozone generator is malfunction	
	The ultra-violet light is malfunction	
	The initiator is malfunction	
Time could not be set	The ON / OFF button is malfunction	Contact your dealer for assistance
	The micro-computer is malfunction	
	Circuit malfunction	Turn off the sterilizer and contact your dealer immediately
Foul odor	Insanitary inside the sterilizer	Clean the inside of the sterilizer by soft rag
	The water collector is full	Clear the water collector
Water trapped inside the sterilizer	The scupper is stuck	Clear the scupper
Water dripped from the sterilizer	The water collector is full	Clear the water collector
Noisy	The fan motor is malfunction	Contact your dealer for assistance

Specification

- * The following specification should not be amended by any means.
We will not be liable for any damages resulting from the amendment.

Specification		Q-7582S	Q-7580W
Dimensions		800×332×400mm	500X332X400mm
Net Weight		17kg	10Kg
Inner cavity material		Stainless steel	
Utensil rack material		Stainless steel	
Sterilizing method	Warm air	○	
	Ozone	○	
	Ultra-violet	X	
	Nanotech	○	X
Warming duration		60/45/30	
Time display		X	
Overheat protection temperature		80°C	
Lighting		8W	
Voltage		220V	
Maximum output power		270W	

總代理：安力貿易有限公司

Sole Agent: Energy Trading Co., Ltd.

地址：香港九龍彌敦道 469-471號 新光商業大廈十三字樓

Address: 13/F, Sunbeam Commercial Building,

469-471, Nathan Road, Kowloon, H.K.

Tel : (852) 2300-1210

Fax: (852) 2300-1255

客戶服務熱線: (852) 2667-6662

Customer Service Hotline: (852) 2667-6662

Website: www.sakuraliving.com.hk